Installation Guide

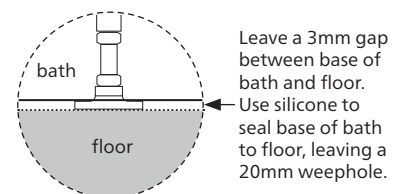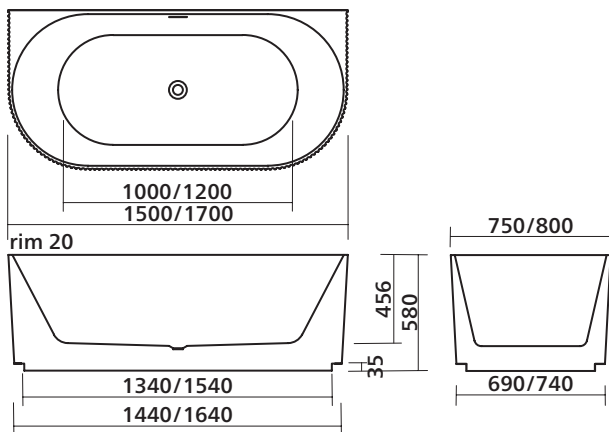# Cleo 115 Freestanding Bath
with integrated overflow ⌣

Important — Read this first!

1 Inspect the bath **before installation** to ensure there are no visible defects. If a defect is found, do not install the bath and contact the supplier immediately. Claims for defects will not be accepted after the product has been installed.

2 The bath must be installed by a **licensed tradesperson**. Failure to do so may void the warranty.

3 Compliance with **AS.3740 Waterproofing of Wet Areas within Residential Buildings** applies when installing baths.

4 **Local authorities** may have specific installation requirements and this should be checked before installation.

5 Grade the **bath sub-floor** in accordance with requirements of local authorities. Grade sub-floor 1:60 minimum.

Installation notes

1 Can be installed using a flexible connector pipe (not supplied).

2 Suits 40 mm waste (not supplied).

3 Use acetic cured silicone sealant. Do not use epoxy type adhesives.

4 Always use the actual product to verify placement.

5 The bath is supplied with four adjustable support feet on the base frame of the bath.

- Position the bath into place and use the adjustable support feet to ensure that the bath is level. Leave a 3mm void between the base of the bath and the floor.

- Use silicone around the base, to seal the bath to the floor. Allow a 20mm gap in the silicone seal, to act as a weephole (the gap is designed to reveal any plumbing leakage).

Warning! *Failure to level the bath correctly may damage the bath structure and cause cracking.*

1000/1200
1500/1700
rim 20
456
580
35
1340/1540
1440/1640

750/800
690/740

bath

floor

Leave a 3mm gap between base of bath and floor. Use silicone to seal base of bath to floor, leaving a 20mm weephole.

⌣ Bath has integrated overflow

SEIMA

kitchen + laundry + bathroom ware

seima.com.au