

AS1428.1 Ambulant Collection: Elevate / Seima Life



Ceramic wall faced toilet suite Clean Flush, Nanoglaze, Easy Care Height

- Stylish minimalist design with curved pan, sits flat against wall
- Clean Flush rimless pan design for an efficient, powerful flush
- Easy care height, pan height 440 mm
- Compliant with AS1428.1 Ambulant guidelines
- White vitreous china with nanoglaze surface, easy to clean
- Soft-closing, easy-clean quick release seat with stainless steel pins
- Universal cistern, suits back entry or bottom entry plumbing

Order codes

191777	Limni WF, Deluxe seat	Old code: STO-309-04
191776	Limni WF, Slim seat	Old code: STO-309-02
191840	Limni WF, Flat seat	Old code: n/a
191775	Limni WF, Classic seat	Old code: STO-309-00

Product details

CISTERN Universal, suits back entry inlet or bottom entry plumbing. Left

and right bottom entry inlet points.

PAN Wall faced close coupled with rimless pan design. TRAPS Universal trap, suitable for S or P trap installations. SEAT Quick release seat with stainless steel hinges, soft closing.

WELS 4 star rating 4.5/3 litre water saving flush.

Variable 90-180 using supplied connector; 150mm recommended. SETOUT FIXING

This is a close coupled toilet suite — the cistern is fixed directly to

the pan and does not require wall fixing.

Pan may be bedded with cement base or using silicone sealant.

Toilet seat options. Our premium toilet seats are made from Thermoset, a rigid, ceramic-like material that is anti-scratch and easy to clean.



DELUXE SEAT

- 40 mm lid profile
- Premium quality
- Easy to clean, anti-scratch
- Rigid, ceramic-like surface
- Made from Thermoset (UF)

SLIM SEAT

- 20 mm lid profile
- Premium quality
- Easy to clean, anti-scratch - Rigid, ceramic-like surface
- Made from Thermoset (UF)

FLAT SEAT - Flat lid and seat

- Premium quality
- Easy to clean, anti-scratch Rigid, ceramic-like surface
- Made from Thermoset (UF)


CLASSIC SEAT

- 40 mm lid profile

- Lightweight, shiny finish

- Easy to clean

- Made from Thermoplastic (PP)

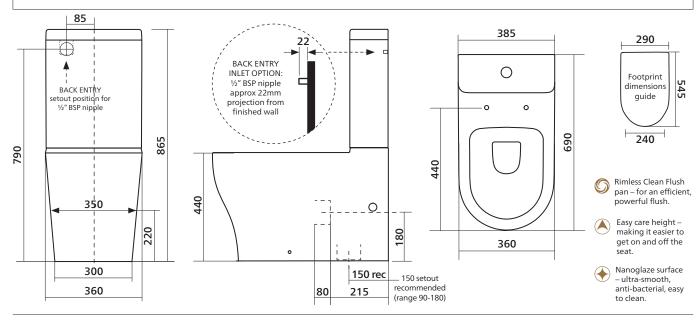

kitchen + laundry + bathroom ware

seima.com.au

- Installation shall be in accordance with AS/NZS3500.
- All measurements are in millimetres. Height dimensions are to base of pan. Make allowance for bedding.
- Bedding: Pan may be bedded with cement base or using silicone sealant. Fix pan to floor using a sand cement mixture of 3:1 to a depth of 60mm. Do not use lime or fast-drying cement.
- Bracket fixing: The pan should be bedded with silicone sealant and fixed with the brackets supplied.
- Do NOT use epoxy type adhesives.
- Dimensions are nominal and subject to normal ceramic manufacturing variations.
- Specifications may vary without notice as part of our continuous improvement practices.
- Clean with a damp cloth. Do not use abrasive cleaners. liquids or pastes.