## Modia Care Wall Faced – 800mm © 🙈





AS1428.1 Accessible Collection: Elevate



## Modia Care wall faced toilet suite

- Rimless Clean Flush, Easy Care Height
- · Choice of grey, blue or white seat
- Stylish minimalist design, sits flat against wall
- Clean Flush rimless pan design for an efficient, powerful flush
- Easy care height, pan height 440 mm
- White vitreous china
- Care toilet seat
- Optional stainless steel backrest
- S or P trap, back entry or bottom entry plumbing

## Order codes

192418 Modia Care WF toilet with GRFY seat 191856 Modia Care WF toilet with BLUF seat 191857 Modia Care WF toilet with WHITE seat

BACKREST

Backrest to suit Modia Care toilets, stainless steel 191971

OPTIONAL SETOUT CONNECTOR

X6000016 Connector for setout 75-215 mm

## **Product details**

FIXING

Suits back entry inlet or bottom entry plumbing. Left and right CISTERN

bottom entry inlet points.

Wall faced close coupled with rimless pan design.

MATERIAL White vitreous china.

BUTTONS Raised flush buttons, full flush and half flush. Universal trap, suitable for S or P trap installations. TRAPS

Care toilet seat, available in Blue and White. Seats are available SEAT

separately as spare parts.

Optional backrest: 32 mm stainless steel, 304 grade, brushed BACKREST

finish, AS1428 compliant.

WELS 4 star rating 4.5/3 litre water saving flush.


SETOUT Variable 190-280 mm.


Optional connector setout range 75-215 mm (code X6000016).


This is a close coupled toilet suite — the cistern is fixed directly to

the pan and does not require wall fixing


Pan may be bedded with cement base or using silicone sealant.

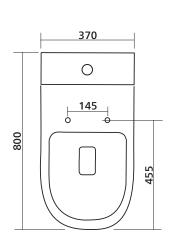


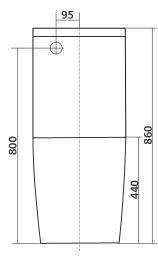

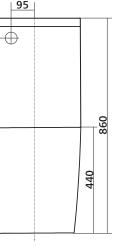



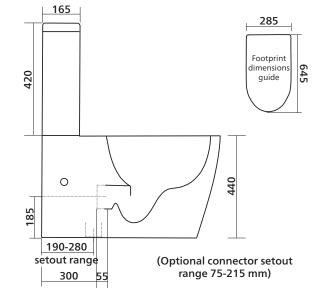





- Installation shall be in accordance with AS/NZS3500.
- All measurements are in millimetres. Height dimensions are to base of pan. Make allowance for bedding.
- Bedding: Pan may be bedded with cement base or using silicone sealant. Fix pan to floor using a sand cement mixture of 3:1 to a depth of 60mm. Do not use lime or fast-drying cement.
- Bracket fixing: The pan should be bedded with silicone sealant and fixed with the brackets supplied.
- Do NOT use epoxy type adhesives.
- Dimensions are nominal and subject to normal ceramic manufacturing variations.
- Specifications may vary without notice as part of our continuous improvement practices.
- Clean with a damp cloth. Do not use abrasive cleaners. liquids or pastes.



seima.com.au