# Modia Floor Mount 🛇 📀 🕭

#### Collection: Elevate

Former name: Modia Floor Mount



### Floor mount toilet suite

## • Clean Flush, Nanoglaze, Easy Care Height

Sleek style and efficient performance in a premium space-saving toilet system with hidden cistern and pneumatic flush.


Pan – details:

- Stylish minimalist design, sits flat against wall
- Clean Flush rimless pan, Nanoglaze finish, Easy Care Height pan
- Compliant with AS1428.1 Ambulant guidelines
  White vitreous china with papoglaze surface, east
- White vitreous china with nanoglaze surface, easy to clean
- Soft-closing, easy-clean quick release seat with stainless steel pins
  S or P trap
- In-wall cistern details:
- Hidden cistern activated through a premium pneumatic system
- Fully insulated with anti-condensation foam to prevent moisture escape
- Easy to install and service through the flush plate
- WELS 4 star 4.5/3L water saving flush

### Order codes

PAN AND SEAT ONLY (NO CISTERN)		
191771	Modia FM pan, Deluxe seat	Old code: STO-307-02
191770	Modia FM pan, Slim seat	Old code: STO-307-01
191841	Modia FM pan, Flat seat	Old code: n/a
191769	Modia FM pan, Classic seat	Old code: STO-307-00
TOILET SUITE – STANDARD WALL INSTALLATION – C100 CISTERN (80MM THICK)		
191774	Modia FM suite, C100 cisternDeluxe seat	Old code: STO-307-12
191773	Modia FM suite, C100 cistern, Slim seat	Old code: STO-307-11
191850	Modia FM suite, C100 cistern, Flat seat	Old code: n/a
191772	Modia FM suite, C100 cistern, Classic seat	Old code: STO-307-10
TOILET SUITE - NIB WALL INSTALLATION - C101 CISTERN (130MM THICK)		
191906	Modia FM suite, C101 cistern, Deluxe seat	t i i i i i i i i i i i i i i i i i i i
191907	Modia FM suite, C101 cistern, Slim seat	
191908	Modia FM suite, C101 cistern, Flat seat	
191909	Modia FM suite, C101 cistern, Classic seat	
Order flush buttons separately.		
PAN	Wall faced with rimless Clean Flush pan design.	
MATERIAL	White vitreous china.	
TRAPS	Universal trap, suitable for S or P trap installations.	
SEAT	Quick release seat with stainless steel hinges, soft closing.	
SETOUT	Variable 90-120 mm using supplied connector.	
FIXING	Pan may be bedded with cement base or using silicone sealant.	

Toilet seat options. Our premium toilet seats are made from Thermoset, a rigid, ceramic-like material that is anti-scratch and easy to clean.

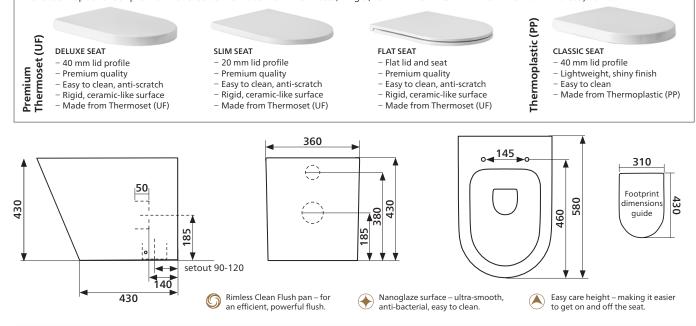

SEIMA kitchen + laundry + bathroom ware


#### Please note

- Installation shall be in accordance with AS/NZS3500.
  All measurements are in millimetres. Height dimensions are to base of pan. Make allowance for bedding.
- Bedding: Pan may be bedded with cement base or using silicone sealant. Fix pan to floor using a sand cement mixture of 3:1 to a depth of 60mm. Do not use lime or fast-drying cement.
- Bracket fixing: The pan should be bedded with silicone sealant and fixed with the brackets supplied.
- Do NOT use epoxy type adhesives.
- Dimensions are nominal and subject to normal ceramic manufacturing variations.
- Specifications may vary without notice as part of our continuous improvement practices.
- Clean with a damp cloth. Do not use abrasive cleaners, liquids or pastes.


# Modia Floor Mount Data sheet page 2




### **MODIA FLOOR MOUNT** pan + C100 IN-WALL SLIM cistern

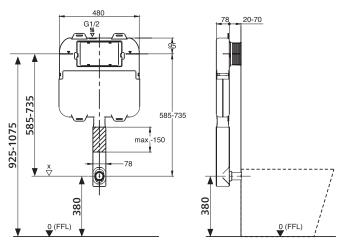

### **MODIA FLOOR MOUNT pan** + C101 IN-WALL UNDERCOUNTER cistern

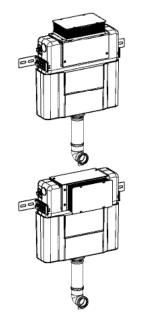

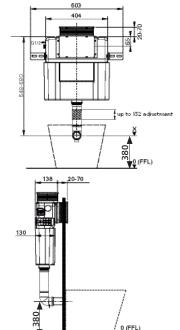

# SEIMA kitchen + laundry + bathroom ware

seima.com.au

#### Please note

- Installation shall be in accordance with AS/NZS3500. All measurements are in millimetres. Height dimensions are to base of pan. Make allowance for bedding.
- Bedding: Pan may be bedded with cement base or using silicone sealant. Fix pan to floor using a sand cement mixture of 3:1 to a depth of 60mm. Do not use lime or fast-drying cement.
- Bracket fixing: The pan should be bedded with silicone sealant and fixed with the brackets supplied.
- Do NOT use epoxy type adhesives.
- Dimensions are nominal and subject to normal ceramic manufacturing variations.
- Specifications may vary without notice as part of our continuous improvement practices.
- Clean with a damp cloth. Do not use abrasive cleaners, liquids or pastes.